


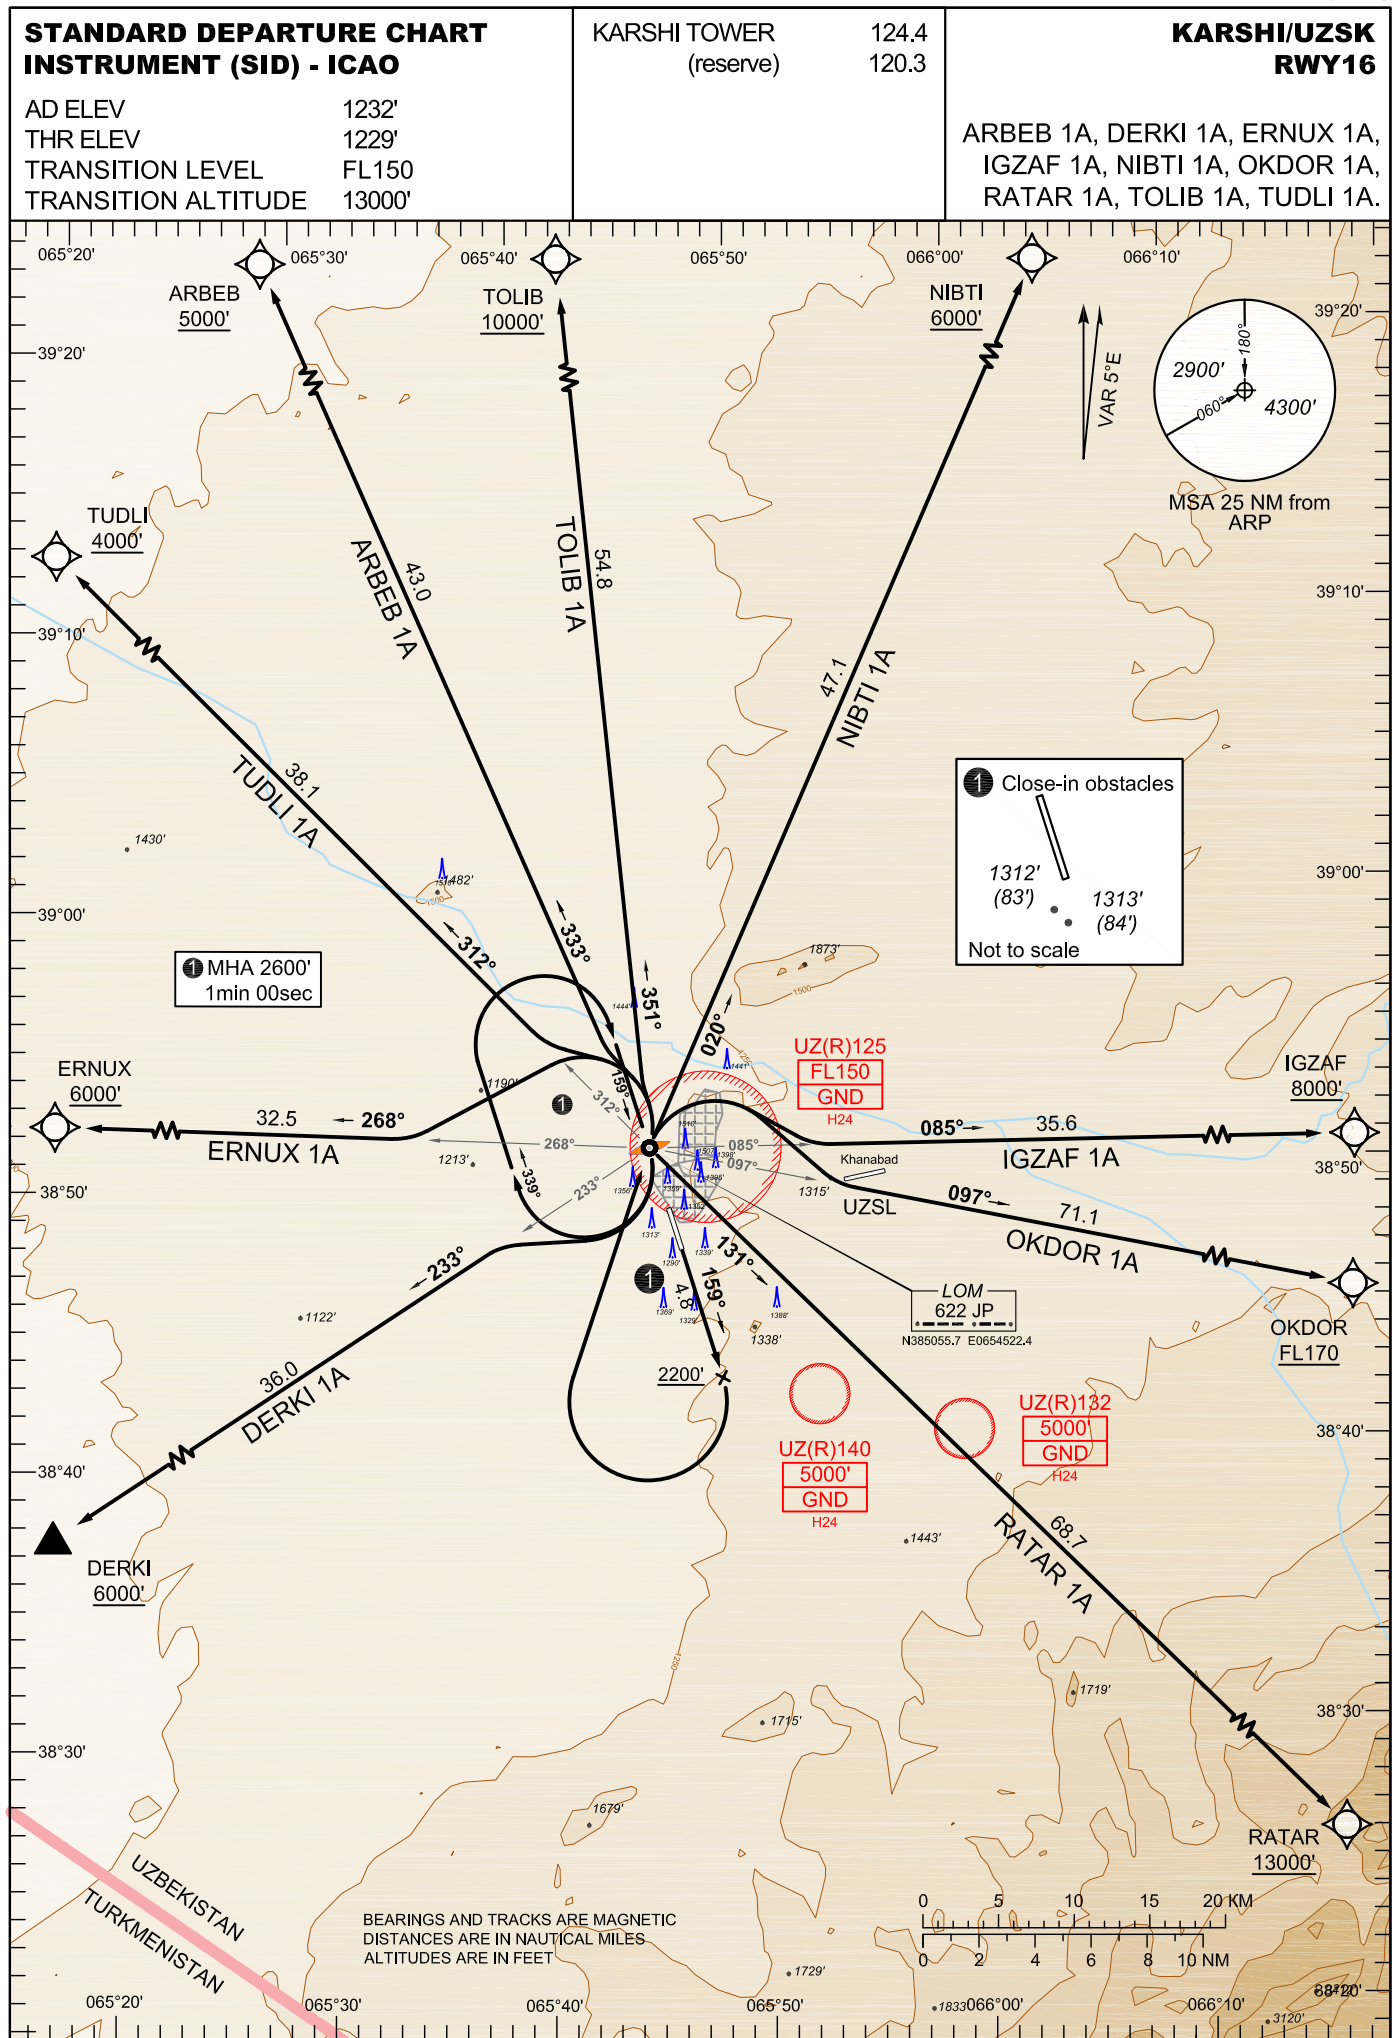

STANDARD DEPARTURE ROUTES - INSTRUMENT RWY16

Initial climb clearance FL150 or by ATC.

INITIAL CLIMB: Climb on TR 159° at 2200' or above.		
SID	Route after initial climb	FL/altitude restrictions
ARBEB 1A	TURN RIGHT to LOM 622 JP, then TURN LEFT to intercept QDR 333° from LOM 622 JP, then proceed on TR 333° to ARBEB.	ARBEB - 5000' or above
DERKI 1A	TURN RIGHT to LOM 622 JP, then HOLDING PATTERN over LOM 622 JP, then TURN RIGHT to intercept QDR 233° from LOM 622 JP then proceed on TR 233° to DERKI.	DERKI - 6000' or above
ERNUX 1A	TURN RIGHT to LOM 622 JP, then TURN LEFT to intercept QDR 268° from LOM 622 JP, then proceed on TR 268° to ERNUX.	ERNUX - 6000' or above
IGZAF 1A	TURN RIGHT to LOM 622 JP, then TURN RIGHT to intercept QDR 085° from LOM 622 JP, then proceed on TR 085° to IGZAF.	IGZAF - 8000' or above
NIBTI 1A	TURN RIGHT to LOM 622 JP, then TURN RIGHT onto TR 020° to NIBTI.	NIBTI - 6000' or above
OKDOR 1A	TURN RIGHT to LOM 622 JP, then TURN RIGHT to intercept QDR 097° from LOM 622 JP, then proceed on TR 097° to OKDOR.	OKDOR - FL170 or above
RATAR 1A	TURN RIGHT to LOM 622 JP, then HOLDING PATTERN over LOM 622 JP, then TURN LEFT onto TR 131° to RATAR.	RATAR - 13000' or above
TOLIB 1A	TURN RIGHT to LOM 622 JP, then TURN LEFT onto TR 351° to TOLIB.	TOLIB - 10000' or above
TUDLI 1A	TURN RIGHT to LOM 622 JP, then TURN LEFT to intercept QDR 312° from LOM 622 JP, then proceed on TR 312° to TUDLI.	TUDLI - 4000' or above

If necessary climb to assigned FL via holding pattern over LOM 622 JP.